

Copyright 2008 Society of Photo-Optical Instrumentation Engineers.

This presentation is published in Proceeding of SPIE (Photonics West 2008) and is made available as an electronic reprint (preprint) with permission of SPIE. One print or electronic copy may be made for personal use only. Systematic or multiple reproduction, distribution to multiple locations via electronic or other means, duplication of any material in this paper for a fee or for commercial purposes, or modification of the content of the paper are prohibited.

High-power pulsed amplifier with low pulse deformation, excellent beam quality and higher energy extraction using special designed ytterbium double cladding fibre having high and flat absorption with negligible photodarkening

*Bertrand Morasse, Éric Gagnon,
Stéphane Chatigny, Philippe de Sandro*

CorActive High-Tech, 2700 Jean-Perrin, suite 121, Québec, Canada,
G2C 1S9

bertrand.morasse@coractive.com , (418) 845-2466

- Application: marking, drilling, etc.
- Pulsed output power sought :
 - 10's to 100's of ns
 - 10's to 100's of kHz
 - 5 W to 30 W
 - mJ range
 - $M^2 \sim 1$ to 2
- Pulsed fiber laser solution: compact, low cost, efficient


Ytterbium doped fibre is a key component

- Low non-linear effects
 - Large mode area
 - Short fiber length
- Stable output power over time
- Control of pulsed shape
- Industrial use
 - Easy to package and simple pumping
 - Stable configuration

Pedestal phosphosilicate ytterbium DCOF

- Why ?
 - Higher extraction and saturation energy
 - Higher and flat absorption
 - Lower photodarkening
 - Bend insensitive
 - Excellent beam quality

Output power : 10W, 0.5 mJ, 20 kHz

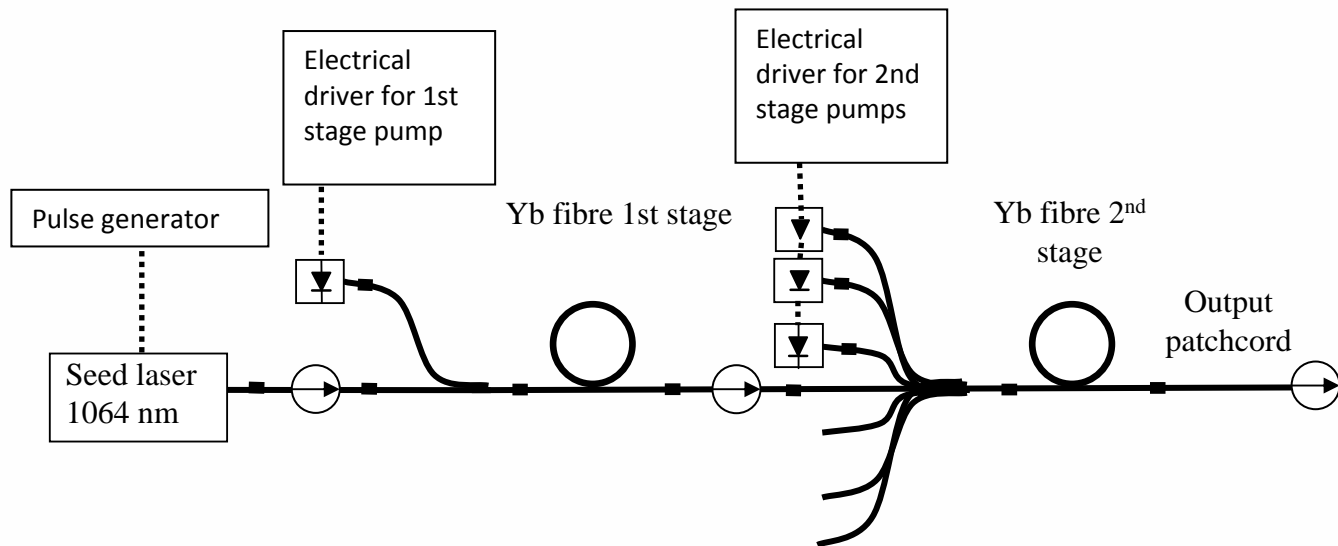

Symbols :

■ Splice and recast

▾ pump diode


⊙ isolator

..... Electrical connections


— Optical fibre

Core = 20 μm ; L=4m


Slope efficiency

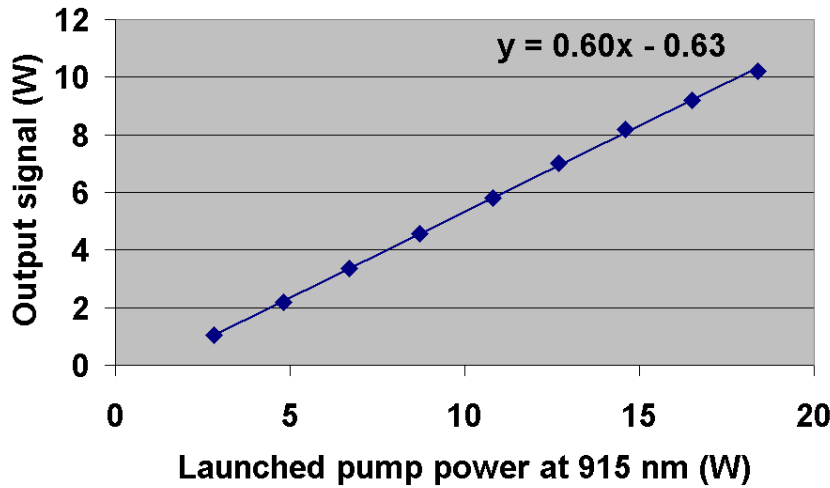


Output spectrum at 10 W

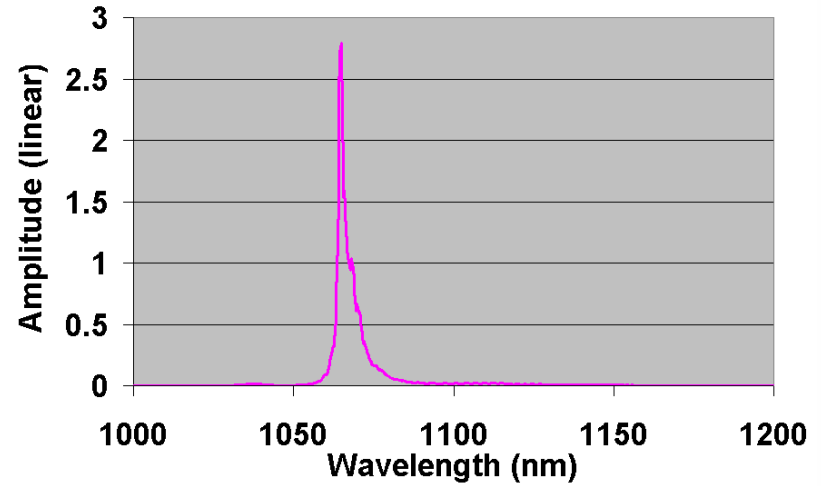

Output pulsewidth

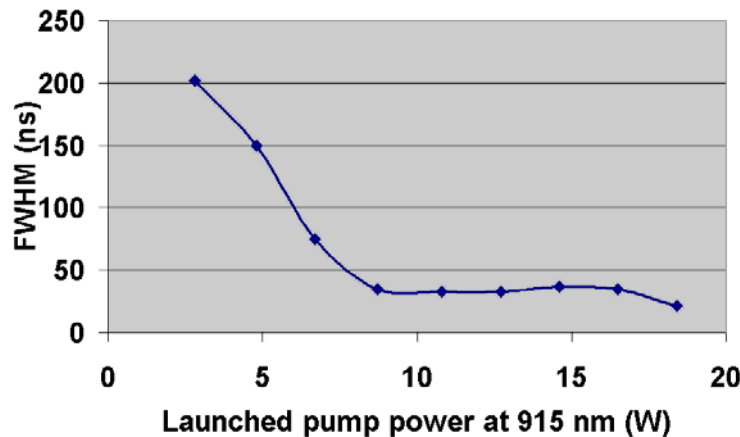





M-square value

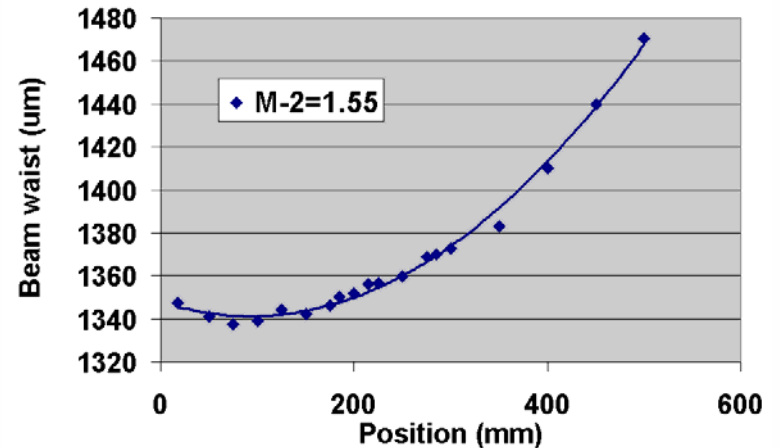


Phosphosilicate 10/125 Yb fiber

Core = 10 μm ; L=4m

Why 10 μm Si-P is better than 20 μm Si-Al fiber?

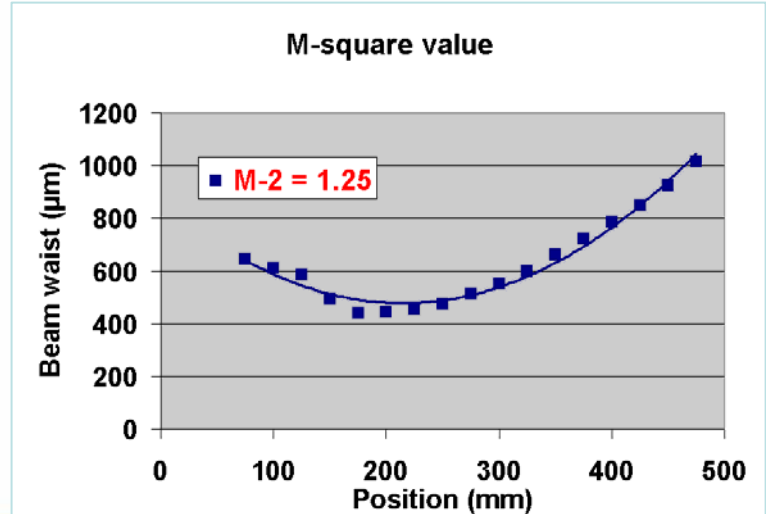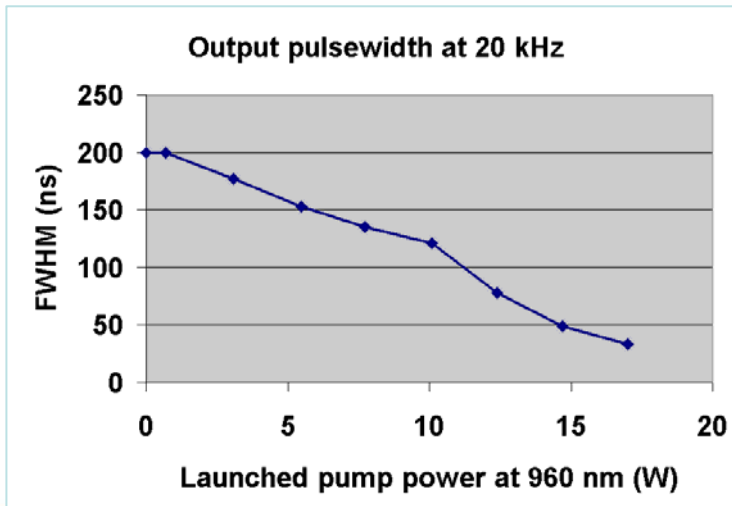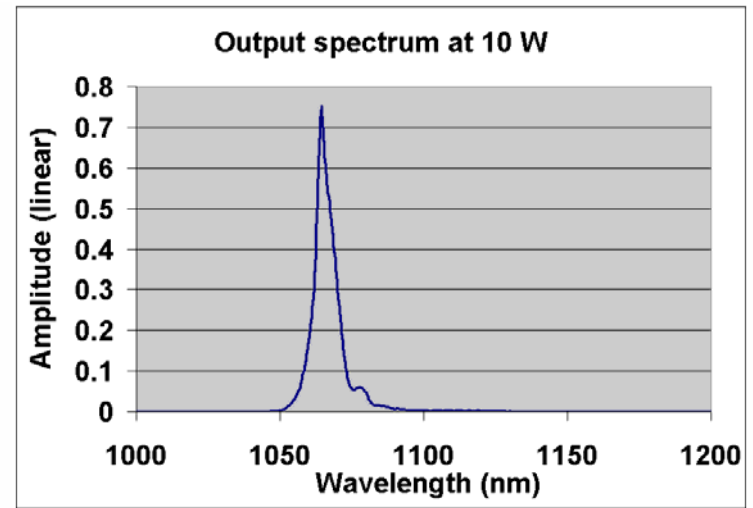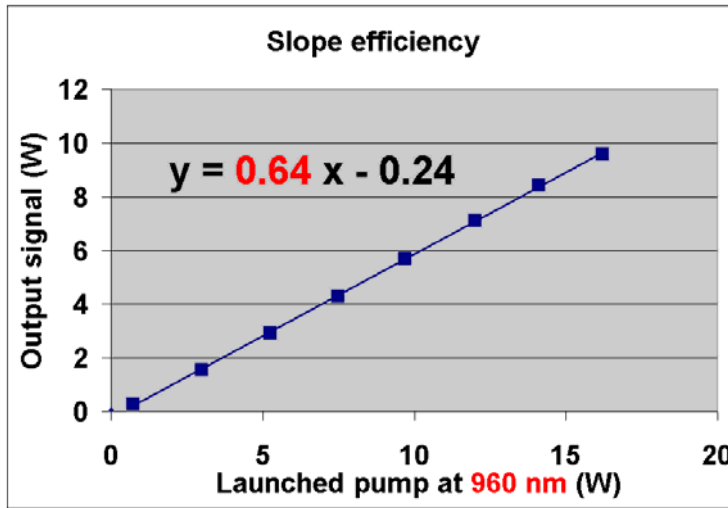


- ▶ 2.5 times more absorption at 915 nm
 - ▶ 4 times more absorption at 960 and 976 nm
- Shorter fiber length = lower non-linear effects

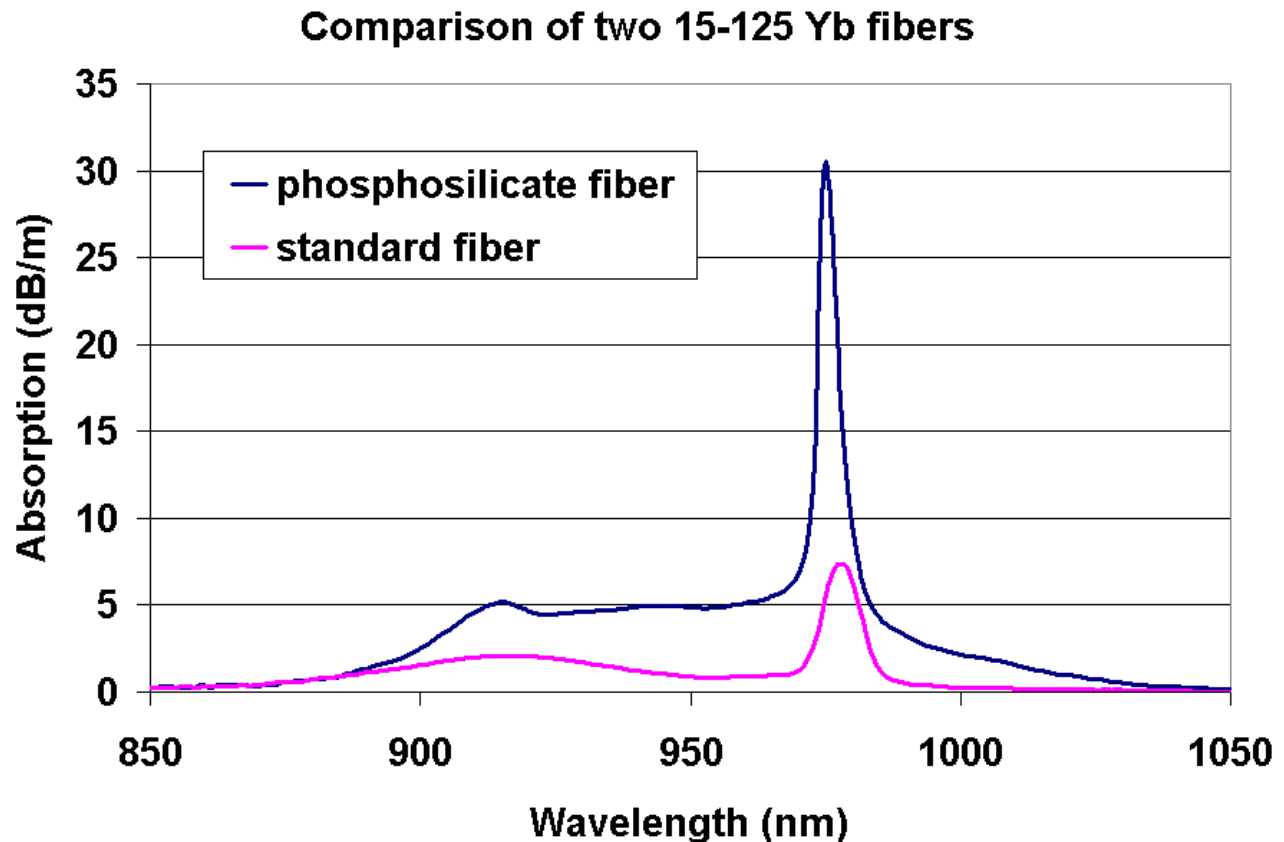


No photodarkening with higher absorption for phosphosilicate fiber

Long term testing of 10W pulsed amplifier
at 40 kHz/100ns

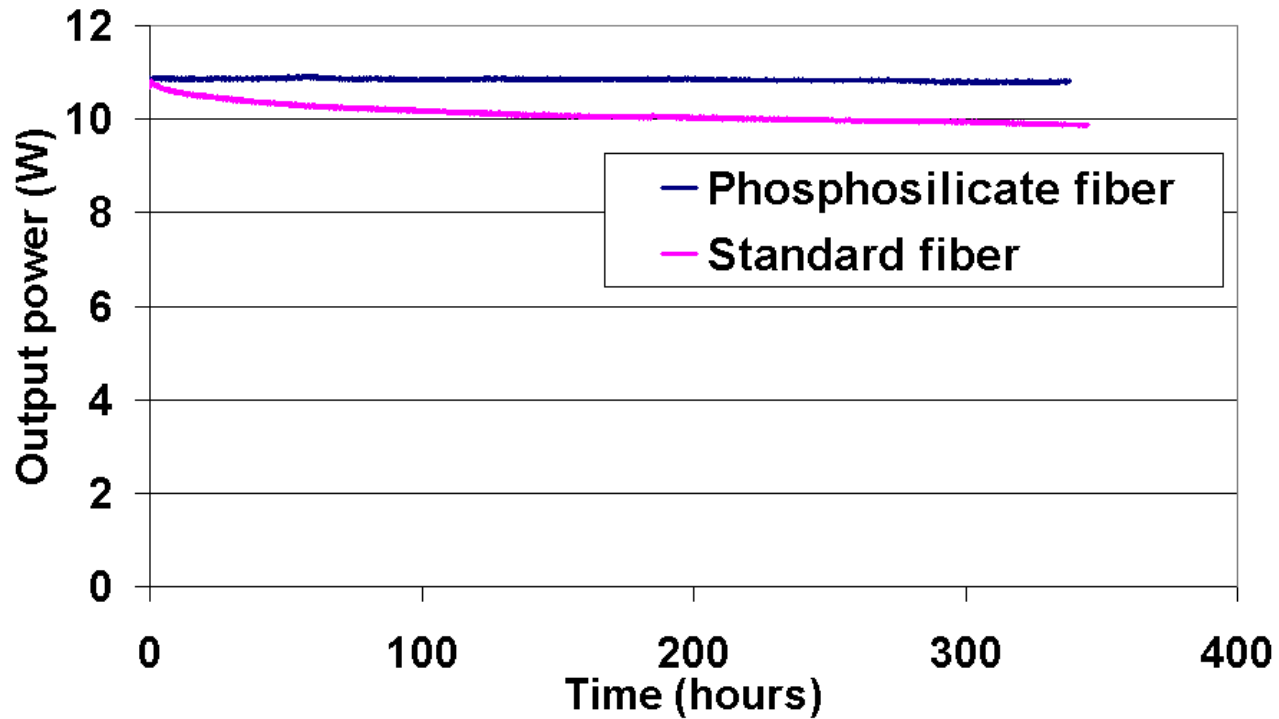

Saturation energy (E_{sat})


Important to control pulse shape in pulsed amplifier

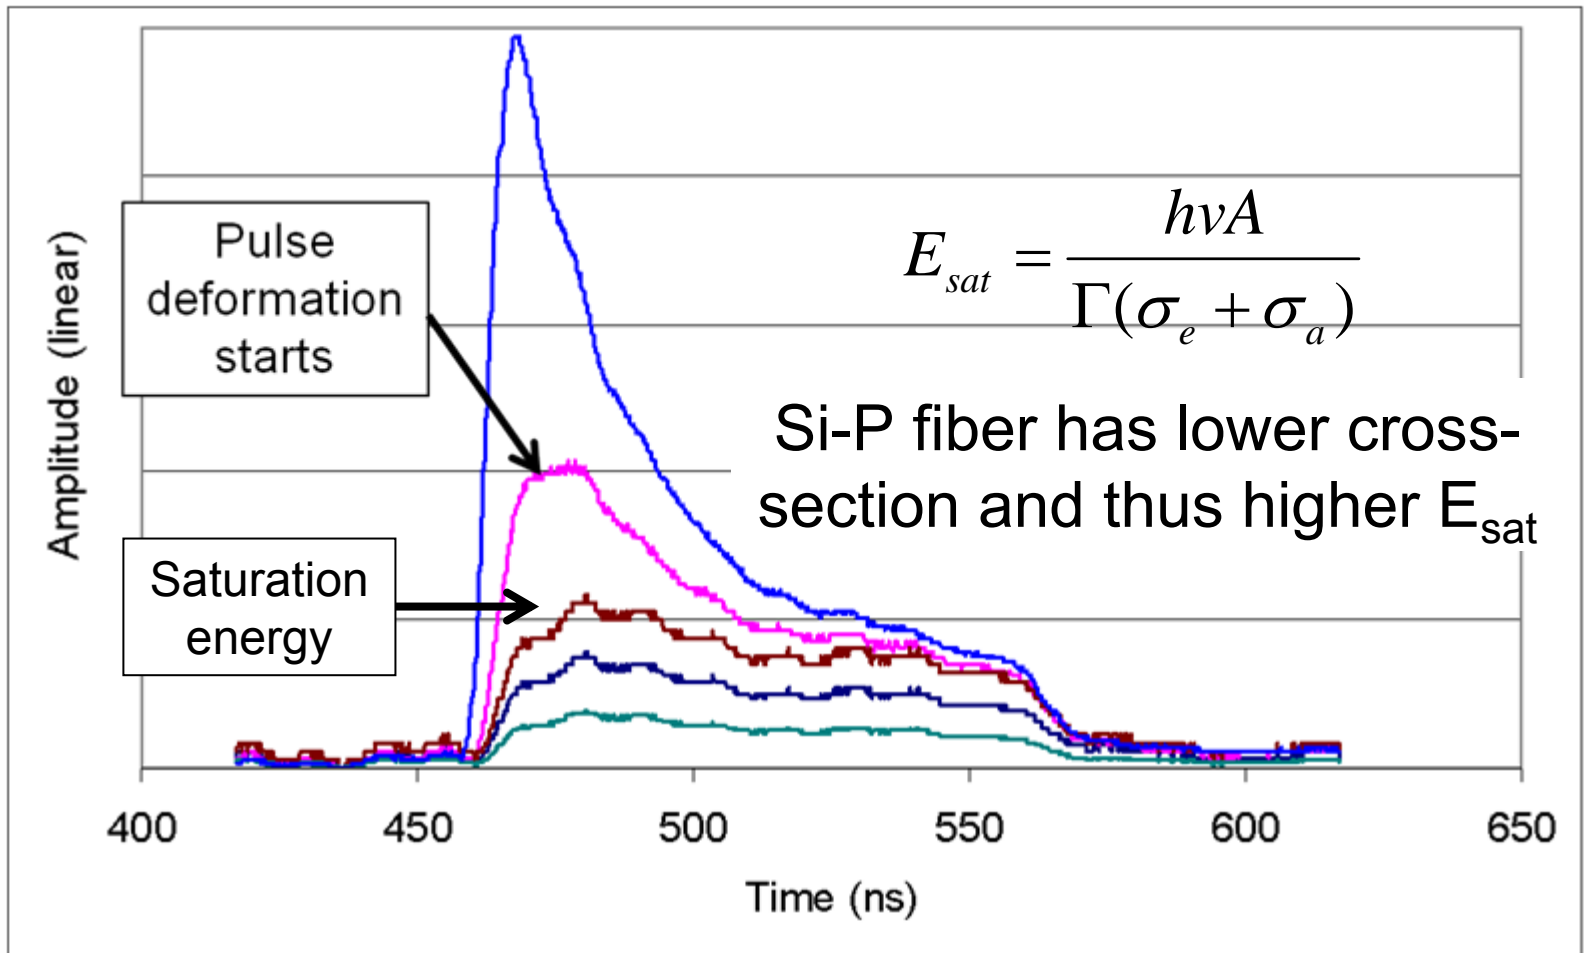

Two times less pulse shortening with phosphosilicate fiber

► Easier to control pulseshape


Output pulsewidth at 20 kHz with 200 ns input square pulse with 15-125 Yb fiber

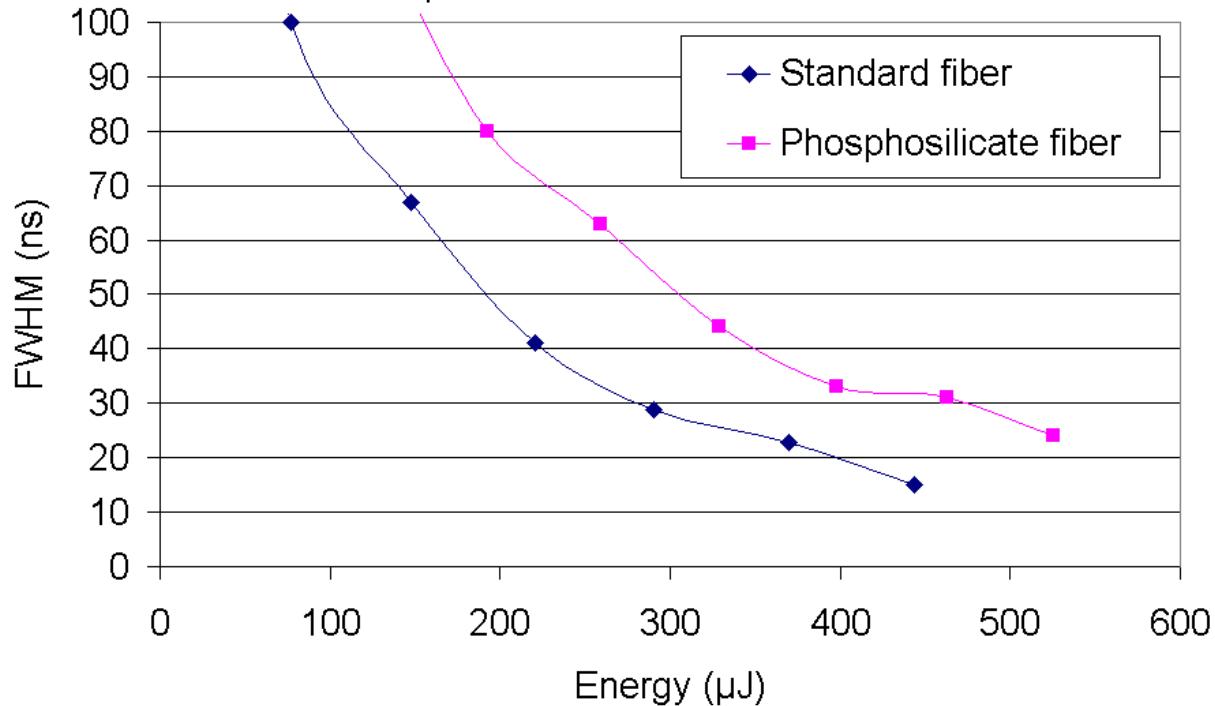


Ref: US Patent 5,173,456: *Phosphate glass useful in high energy lasers*

Flat absorption: no pump tuning necessary


- ▶ Inexpensive fan cooling of pump diodes

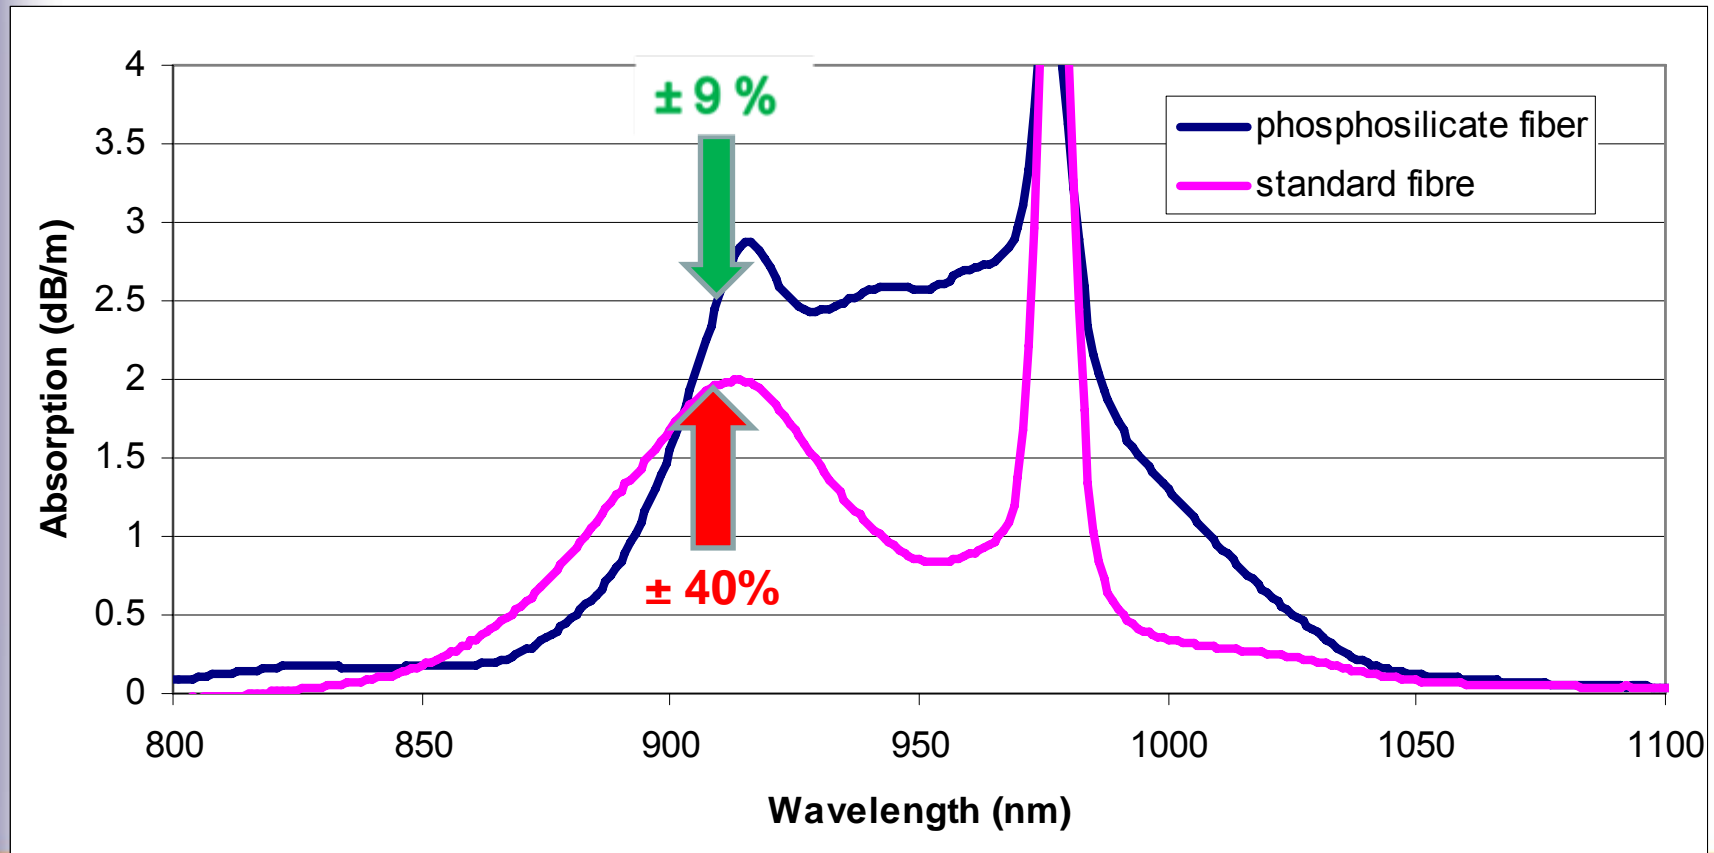

960 nm pumping possible without increased non-linear effects

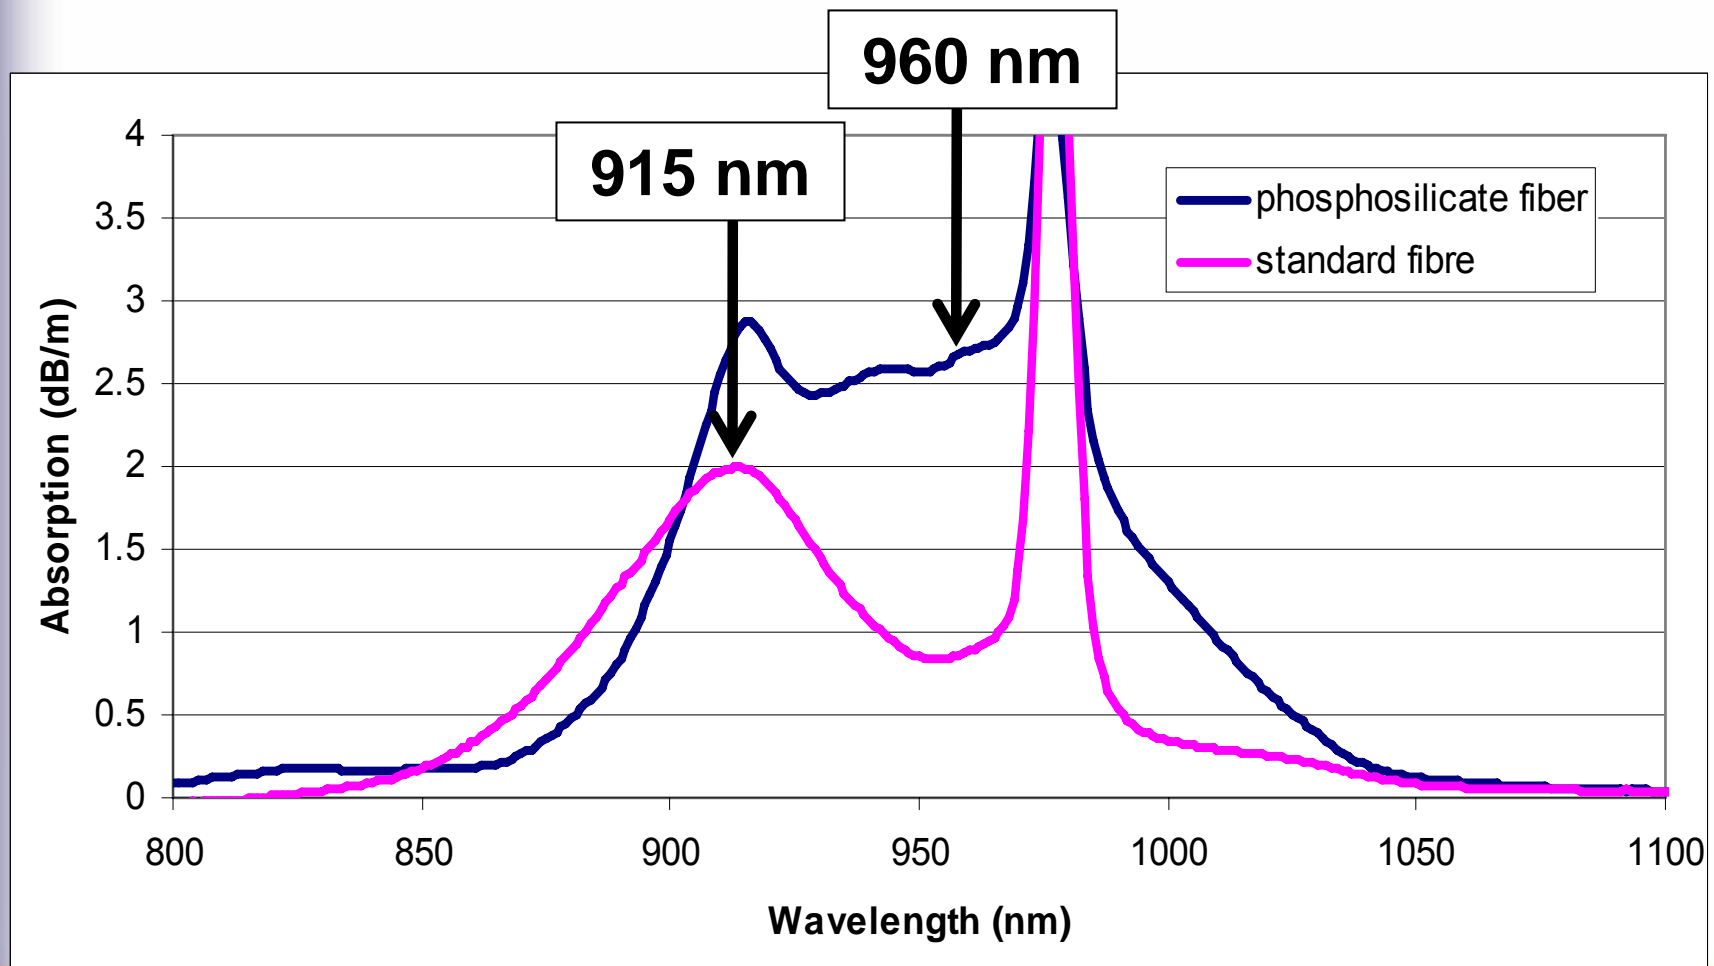


More efficient system with 960 nm pumping
→ due to lower quantum defect
→ decrease pump diode cost

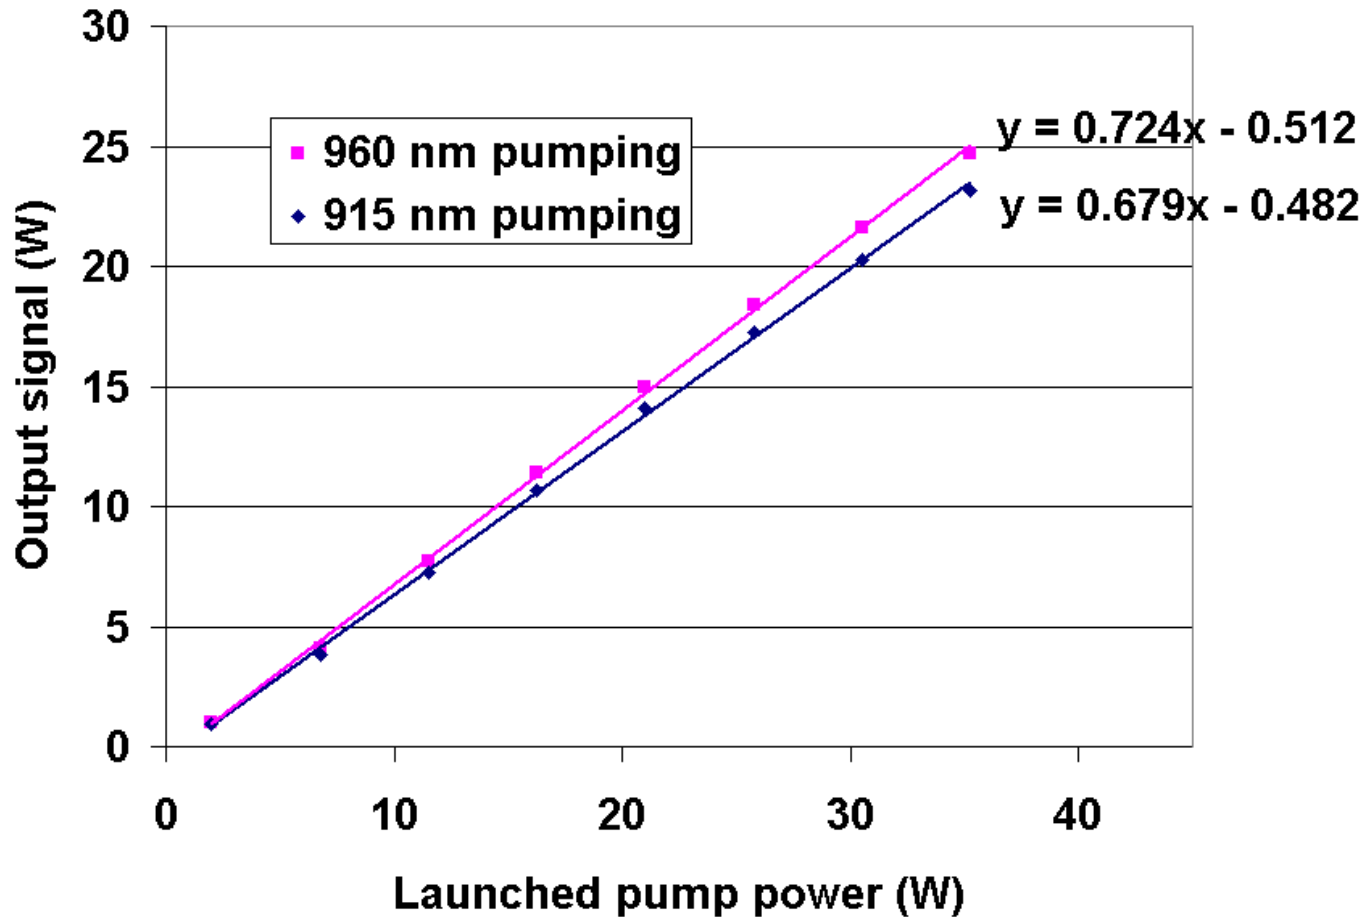


Pedestal design

- Increase doping level : Yb and P
- Maintain a reduced core numerical aperture
 - increase mode area: decrease non-linear effects
 - reduce number of modes: improve beam quality
 - reduce ASE generated
- Spliceable to standard fiber : < 0.1 dB loss
- Higher resistance to bending loss

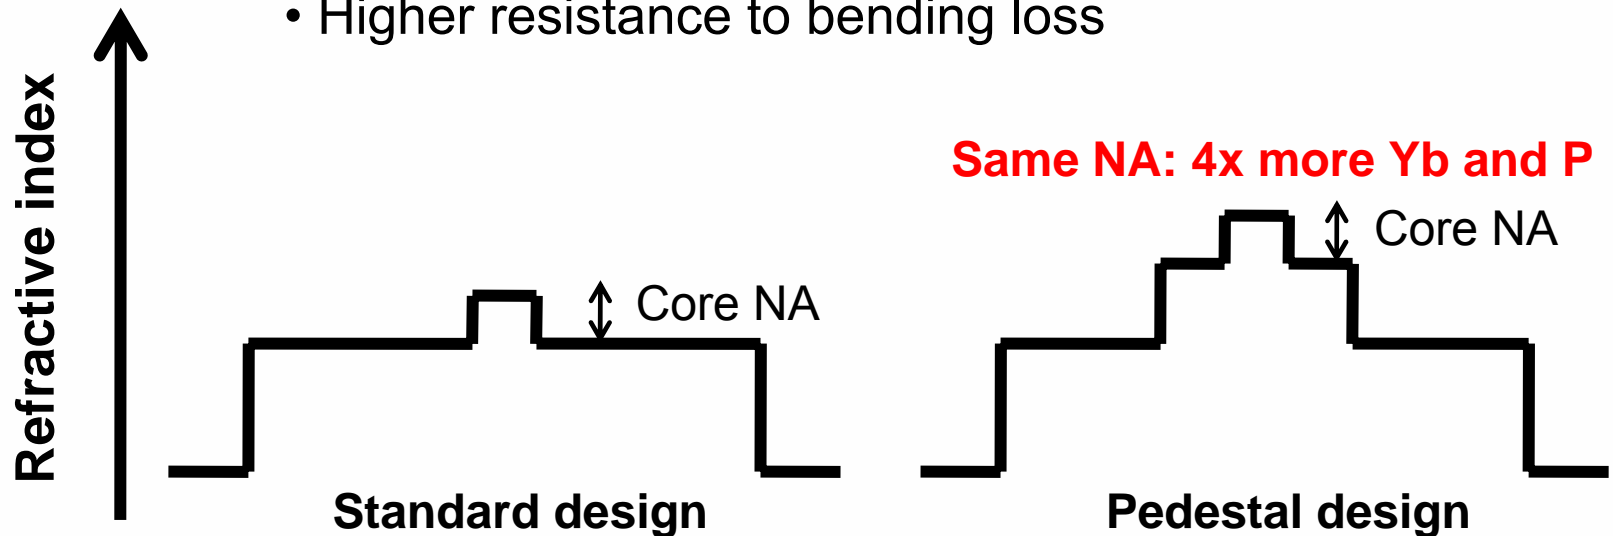



Reference: INO Patent US6941053 2003 and US7068900 2005
Triple-clad rare-earth doped optical fiber and applications

Pedestal phosphosilicate refractive index profile

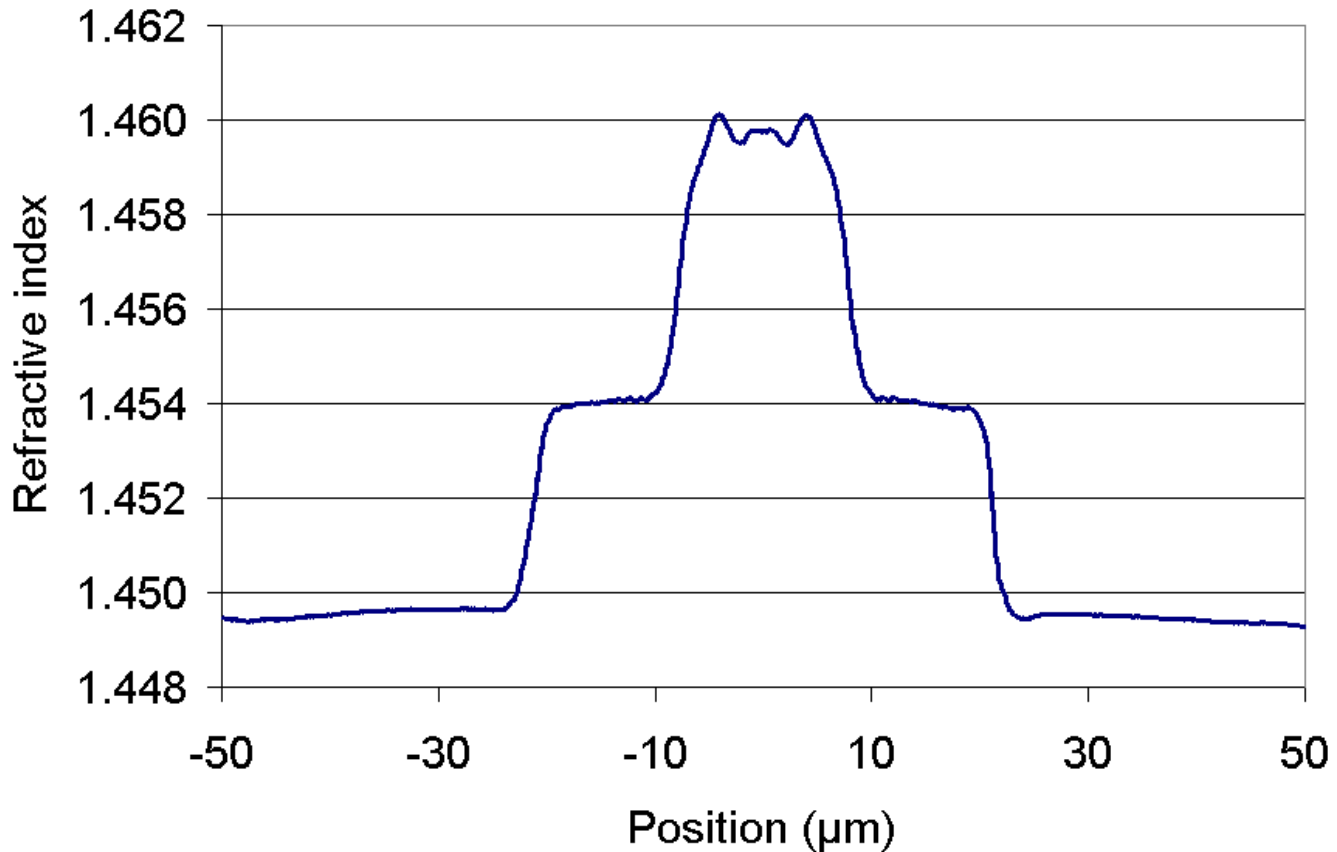

Bending resistant due to pedestal design

▶ Easier to package

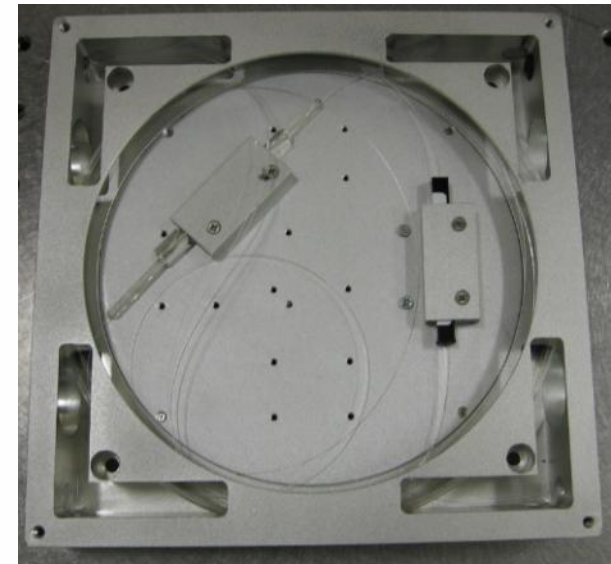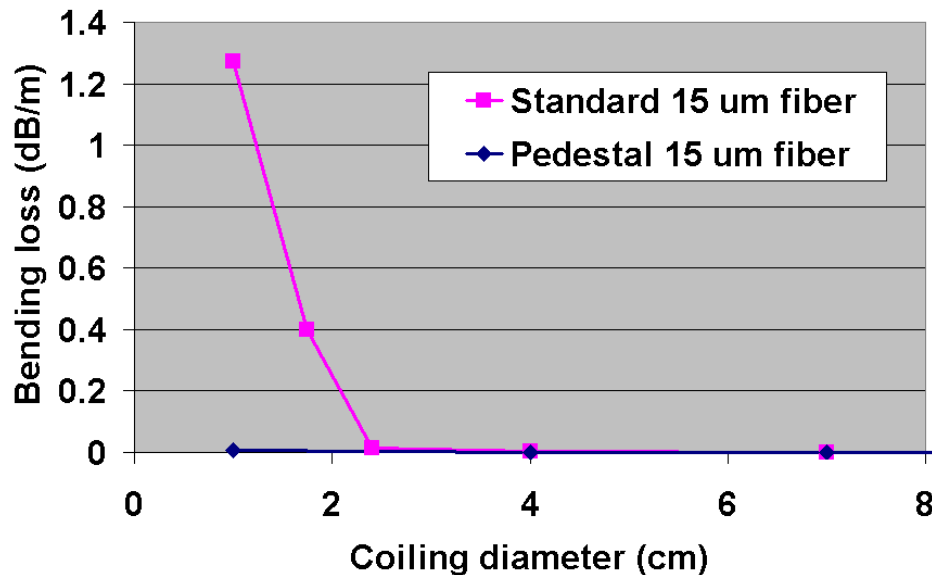

- Benefits of the Pedestal phosphosilicate ytterbium fiber for pulsed fiber application:
 - Highest absorption without photodegradation
 - Reduced non-linearities
 - Flat absorption for more stable pumping
 - Higher slope efficiency with 960 nm pumping
 - Higher energy extraction
 - Less pulse deformation and pulseshaping requirement
 - Higher beam quality
 - Bend resistant design for easier packaging

Thank you for your attention



SPIE 
Photonics West Booth 6189